




User's Manual

Menu Driven Display

Fully Programmable

24 VAC with Worry-Free
Memory Storage

English, Spanish or
French Display Option

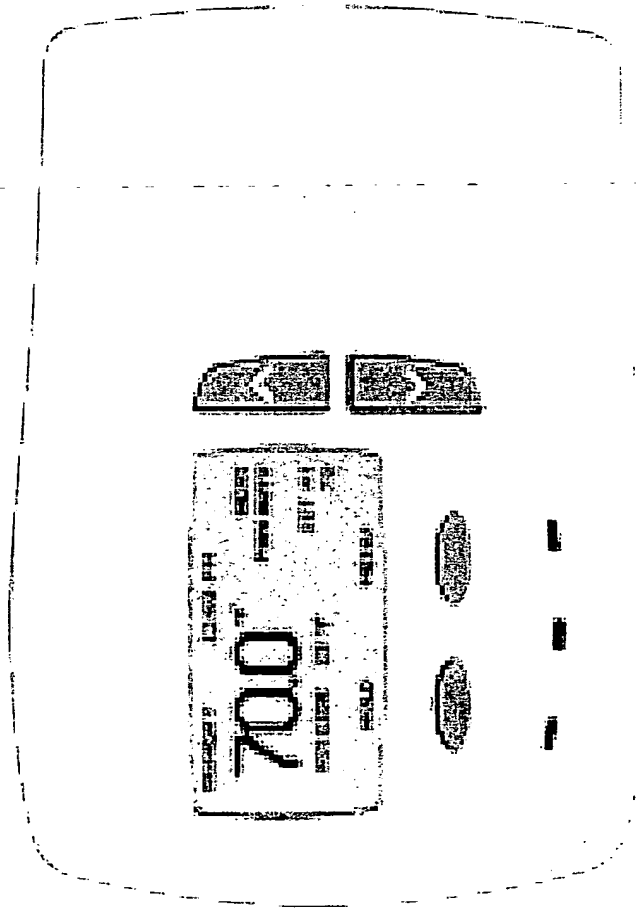


Two Year Warranty

110-1023C

BEST AVAILABLE COPY

How do I change the time of day and day of the week?

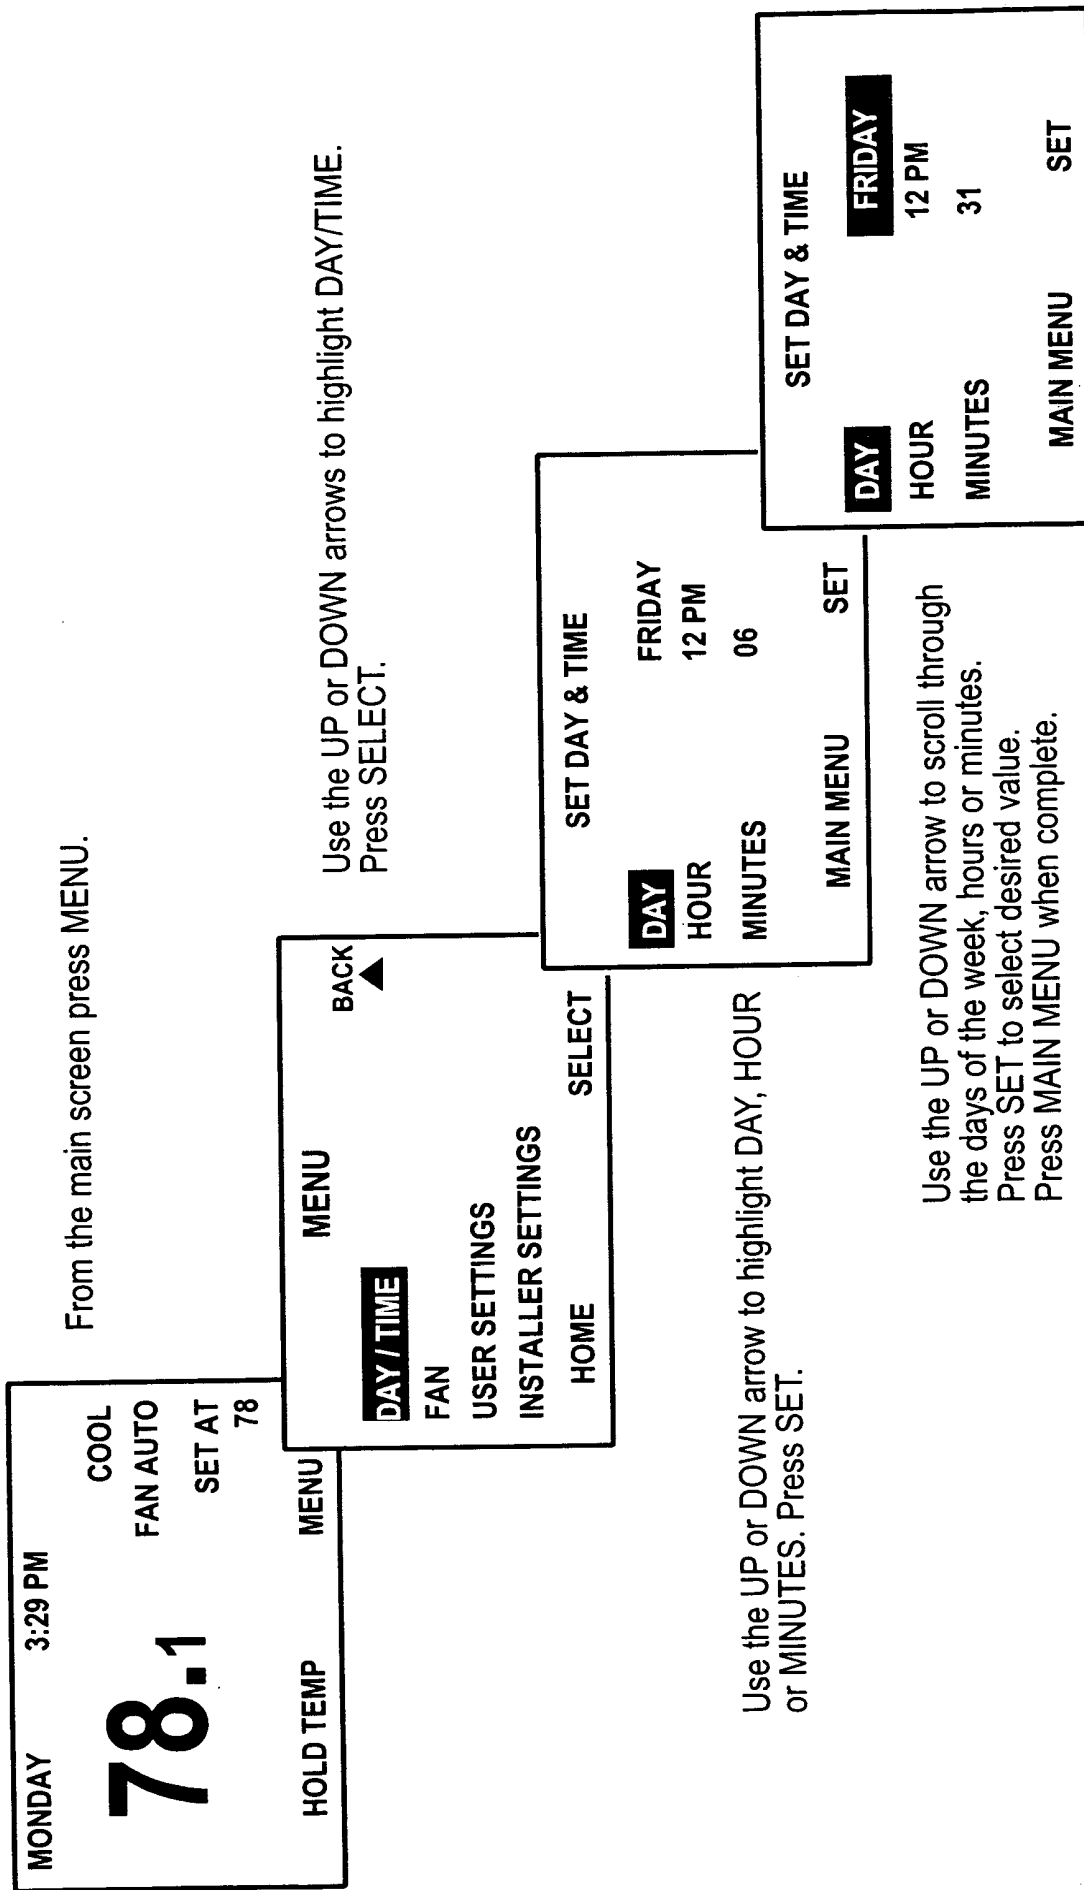

How do I turn on the heating or cooling cycles?

MONDAY	3:29 PM	COOL
78.1		
HOLD TEMP	MENU	FAN AUTO
		SET AT 78

From the main screen press MENU.

MENU	
PROGRAM	HOME SELECT
HEAT/COOL	
DAY / TIME	
FAN	

▼
MORE

Use the UP or DOWN arrows to highlight HEAT/COOL.
Press SELECT.


HEAT / COOL SETTINGS	
HEAT	SELECT
COOL	
AUTO	
EMERGENCY HEAT	
MAIN MENU	

Use the UP or DOWN arrows to highlight HEAT, COOL or AUTO. Press SELECT. The SELECT button will turn on or off the desired cycle. You do not have to turn off HEAT to turn on COOL. When HEAT or COOL or AUTO is turned on, all others are automatically shut off. After pressing the SELECT button, the main screen will automatically appear.

NOTE: Emergency heat is only used on the 9720i model.

HEAT / COOL SETTINGS	
HEAT	
COOL	
AUTO	
EMERGENCY HEAT	
MAIN MENU	SELECT

How do I cycle the fan?

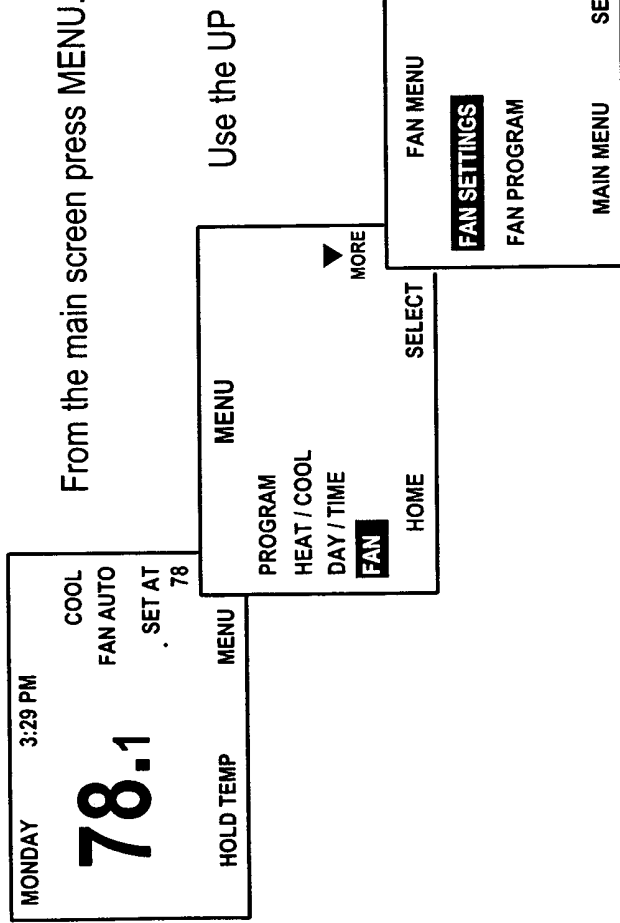

Three choices are available:
ON will turn the fan on continuously.
AUTO will turn the fan on only when there is a call for heating or cooling.
INTERMITTENT will turn the fan on for a set period of time for a given interval. Highlight the choice you desire and press SELECT.

How does INTERMITTENT FAN work?

INTERMITTENT FAN			
ON	TIME	5 MIN	SELECT
OFF	TIME	20 MIN	
FAN MENU			

INTERMITTENT will turn the fan on for a set period of time for a given interval.

The thermostat will cycle the fan on for the set ON cycle. The fan will remain off for the set OFF cycle.

If the HVAC system runs for a longer period than the ON cycle, the OFF cycle will start counting over again when the system shuts off.

How do I temporarily change the temperature?

MONDAY3:29 PM

78.1

COOL
FAN AUTO
SET AT 78

HOLD TEMP

MENU

From the main screen, press the UP or DOWN button. The screen will change to the following.

SET TEMPERATURE AT

70.0°F

UNTIL 6:29 PM

HOME

SET TEMP

Use the UP or DOWN button to adjust to the desired temperature. This is a temporary 3-hour hold or until the next programmed event, whichever is shorter. For a longer duration see page 9.

SET AT 70°F UNTIL 6:29 PM

70.5°F

COOL
FAN AUTO

OUTSIDE 24°F

RESUME
PROGRAM

MENU

After pressing the SET TEMP button or after 5 seconds the screen will indicate the new setpoint and its duration. To return to the normal operating program mode, press RESUME PROGRAM.

Can I set a temporary adjustment for longer than 3 hours?

MONDAY	3:29 PM	COOL FAN AUTO SET AT 78	MENU
78.1		HOLD TEMP	

Yes you can! Press the HOLD TEMP button. The following screen appears.

HOLD SETTINGS	
PERMANENT HOLD	SELECT
TEMPORARY HOLD	
VACATION HOLD	
HOME	

Press the DOWN button to highlight TEMPORARY HOLD. Press SELECT.

TEMPORARILY AT	
70.0 °F	UNTIL 3:49 PM
HOME	SET TEMP

The temperature should be highlighted. Press the UP or DOWN button to adjust the temperature. Press SET TEMP.

TEMPORARILY AT	
70.0 °F	UNTIL 3:49 PM
HOME	SET TIME

The time should be highlighted. Press the UP or DOWN button to adjust the time. Press SET TIME.

SET AT 70°F UNTIL 8:29 PM	
77.0 °F	COOL FAN AUTO
RESUME PROGRAM	MENU

The main screen will now indicate a TEMPORARY HOLD until the desired time. Press RESUME PROGRAM to return to the program operating mode.

Can I set the thermostat to hold one temperature indefinitely?

You can do that too! From the main screen press the HOLD TEMP button. The following screen appears.

MONDAY 3:29 PM

78.1

COOL
FAN AUTO
SET AT 78

HOLD TEMP

MENU

HOLD SETTINGS

PERMANENT HOLD

TEMPORARY HOLD

VACATION HOLD

HOME

SELECT

The PERMANENT HOLD feature should be highlighted. If it is not, use the UP or DOWN arrow to highlight it. Press SELECT.

PERMANENTLY AT

70.0°F

HOME

SET TEMP

Use the UP or DOWN arrow to set the temperature to the desired level. Press SET TEMP.

PERMANENTLY SET AT 71.0°F

70.0°F

OUTSIDE 24°F

RESUME PROGRAM

COOL
FAN AUTO
MENU

The main screen will now indicate a PERMANENT HOLD. Press RESUME PROGRAM to return to the program operating mode.

How do I return to the Program Mode after being in HOLD?

PERMANENTLY SET AT 71.0°F

70.0°F


OUTSIDE 24°F

RESUME PROGRAM


COOL
FAN AUTO
MENU

Simply press the RESUME PROGRAM button. This works from all HOLD screens.


How do I set the Vacation Mode?

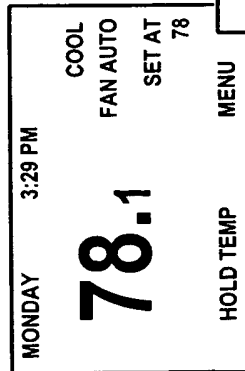


Take a trip and don't worry about the temperature! From the main screen press the HOLD TEMP button. The following screen appears.

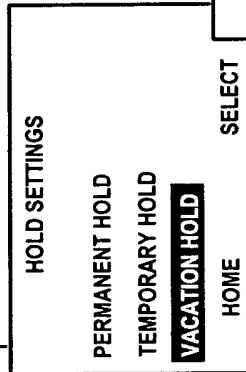


Use the UP or DOWN arrow to highlight the VACATION HOLD feature. Press SELECT.

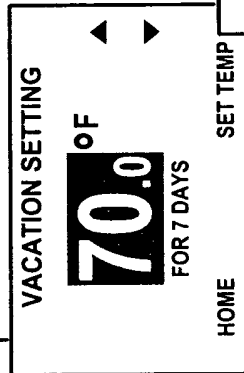

The temperature should be highlighted. Use the UP or DOWN arrow change to the desired temperature. Press SET TEMP.

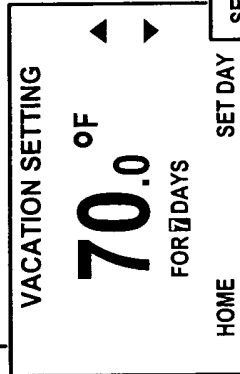


The number of days should be blinking. Use the UP or DOWN arrow to set the length of your vacation. Press SET DAY.

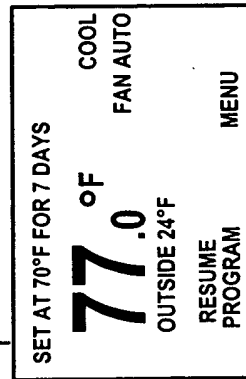


The main screen will now indicate the VACATION settings. Press RESUME PROGRAM to cancel and return to the program operating mode.


How do I program my thermostat?

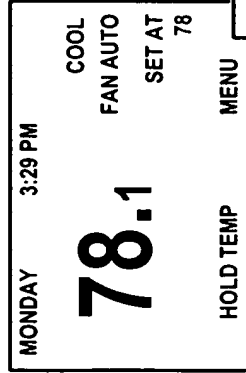


From the main screen press the MENU button.

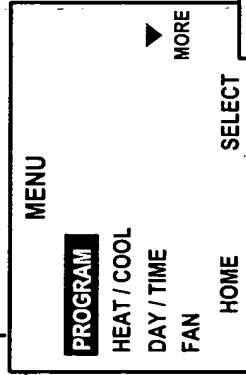

Use the UP or DOWN button to highlight PROGRAM. Press SELECT.

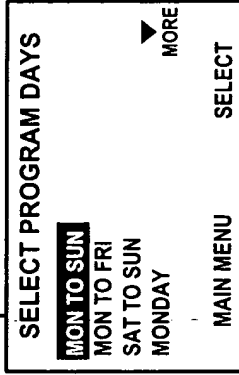

You can select a variety of programming. Make your selection and press SELECT. MON-SUN allows every day to be set the same. MON-FRI allows for weekday programming while SAT-SUN will adjust weekends differently. You also can select each day of the week individually. NOTE: Even if you select MON-SUN, you still can go back and change individual days to suit your lifestyle.

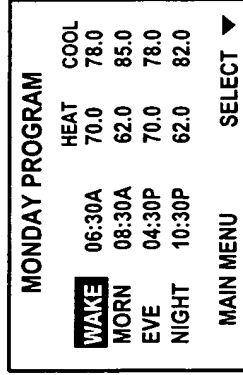

Use the UP or DOWN button to select the event to program. The thermostat can be selected for 2, 4, or 6 events per day. See USER SETTINGS for EVENTS PER DAY selection. After selecting the event to program, press SELECT.

Please go to the next page for a continued discussion on "How to program your thermostat."

How do I program my thermostat? (Con't.)

MONDAY PROGRAM			
	HEAT	COOL	
WAKE	70.0	78.0	
MORN	62.0	85.0	
EVE	70.0	78.0	
NIGHT	62.0	82.0	
MAIN MENU			
SET TIME ▼			

The time for the first event should be highlighted. Use the UP or DOWN key to change the time. Press SET TIME.

MONDAY PROGRAM			
	HEAT	COOL	
WAKE	70.0	78.0	
MORN	62.0	85.0	
EVE	70.0	78.0	
NIGHT	62.0	82.0	
MAIN MENU			
SET HEAT ▼			

The heating setpoint for the first event will be highlighted. Use the UP or DOWN key to change the desired temperature. Press SET HEAT.

MONDAY PROGRAM			
	HEAT	COOL	
WAKE	70.0	78.0	
MORN	62.0	85.0	
EVE	70.0	78.0	
NIGHT	62.0	82.0	
MAIN MENU			
SET COOL ▼			

The cooling setpoint for the first event will be highlighted. Use the UP or DOWN key to change the desired temperature. Press SET COOL.

MONDAY PROGRAM			
	HEAT	COOL	
WAKE	06:30A	70.0	78.0
MORN	08:30A	62.0	85.0
EVE	04:30P	70.0	78.0
NIGHT	10:30P	62.0	82.0
MAIN MENU			
SELECT ▼			

The second event will now be highlighted. Use the UP or DOWN key to change events if desired. When the desired event is highlighted, press SELECT. Continue programming until all events are programmed.

How do I copy one day's program to another day?

MONDAY PROGRAM ▲

		HEAT	COOL
MORN	08:30A	62.0	85.0
EVE	04:30P	70.0	78.0
NIGHT	10:30P	62.0	82.0
COPY			

MAIN MENU

SELECT

In the program screen, press the DOWN button until COPY is highlighted.

COPY MONDAY TO

TUESDAY	YES
WEDNESDAY	
THURSDAY	
FRIDAY	YES
FINISHED	YES / NO

▼

Use the UP or DOWN button to highlight the day to copy to. Press YES / NO. A YES will appear next to the day. Do this for each day to which that program is to be copied. Press FINISHED when complete.


After pressing FINISHED, you can choose to program other days or exit. YES will take you back to the Select Program Days screen. NO will exit you to the main screen.

CONTINUE PROGRAMMING?


NO

YES

What are the USER settings?

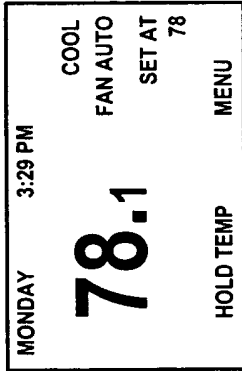





The USER SETTINGS can change the way information is displayed on the thermostat and help to optimize comfort. It's one way to truly personalize your new thermostat.

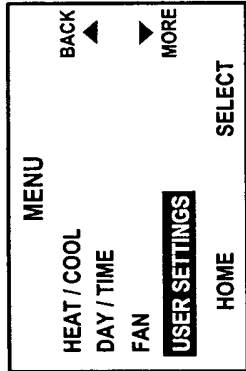

To get to the USER SETTINGS, press the MENU button from the main screen.

USER SETTINGS are below the FAN settings. Use the DOWN button to scroll below the screen. Press SELECT.

Choose the setting you would like to change. When the SETTING is highlighted, press SELECT. There are 13 USER SETTINGS in all as listed below. For detailed information on each user setting, please go to the next page.

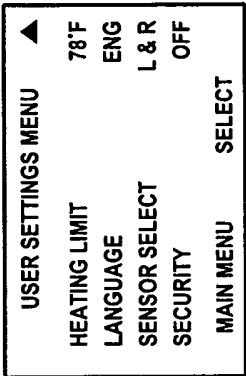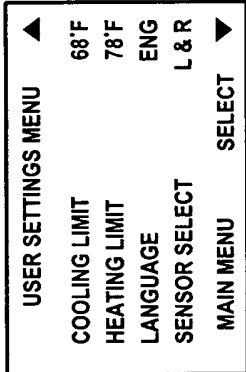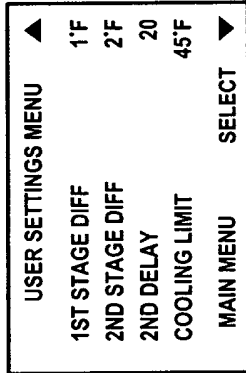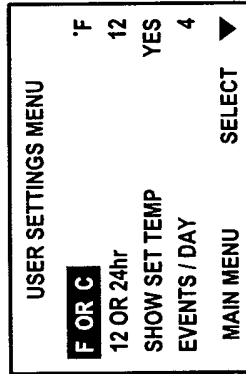

Detailed Information on the USER SETTINGS (Or what do these USER SETTINGS do?)

To select a USER SETTING, use the UP or DOWN button to highlight the desired value. Press SELECT to select desired value.

TEMPERATURE	
F	°C
USER MENU	SELECT

TEMPERATURE: Fahrenheit or Celsius
Temperature will be displayed in F or C.

CLOCK	
12 HOUR	24 HOUR
USER MENU	SELECT

CLOCK SETTINGS
Displays time in standard 12-hour format or military format.

DISPLAY SET POINT TEMPERATURE ?	
YES	NO
USER MENU	SELECT

SETPOINT TEMPERATURE
Each event has a setpoint temperature. Choose whether to display this value or not.

SELECT EVENTS / DAY	
EVENTS / DAY 4	
0	6 12 18 24
USER MENU	SELECT

NUMBER OF EVENTS PER DAY
Select events per day. Choose from 2, 4, or 6 events per day.

More Detailed Information on the USER SETTINGS.

DIFFERENTIAL SETTING	
1ST DIFF	1°F
2ND DIFF	2°F
2ND DELAY	20 MIN
USER MENU	SELECT

DIFFERENTIAL SETTINGS

The temperature differential is your comfort level. A lower differential means your system may cycle with greater frequency but will control closer to desired setpoint temperature. The second stage delay is a timed delay to indicate how much time should pass before the second stage is turned on. This is an energy saving feature. To use less energy, set this higher. For greater comfort, set it lower.

SET COOLING LIMIT	
LOWEST COOLING SETTING ALLOWED	45 °F
USER MENU	SELECT

HEATING and COOLING LIMITS

To prevent individuals (probably your kids) from adjusting the thermostat too hot or too cold, you can limit the maximum setting for the heating and cooling modes. This will help you save on energy costs.

SET HEATING LIMIT	
HIGHEST HEATING SETTING ALLOWED	90 °F
USER MENU	SELECT

SELECT A LANGUAGE	
ENGLISH	
ESPAÑOL	
FRANÇAIS	
USER MENU	SELECT

LANGUAGE SETTING

This screen allows you to choose the displayed language; English, French, or Spanish.

More Detailed Information on the USER SETTINGS.

SENSOR SETTINGS

USE LOCAL SENSOR
AVG. LOCAL / REMOTE
USE REMOTE SENSOR

USER MENU SELECT

SENSOR SETTINGS

This screen will appear when a remote indoor sensor (9020i) is connected to the thermostat. USE LOCAL SENSOR will disable the remote sensor and only sense from the thermostat. AVG. LOCAL/REMOTE will take a temperature reading from both the thermostat and the remote sensor and average the two for even temperature control. USE REMOTE SENSOR will disable the sensor in the thermostat and only control from the remote location.

SECURITY

CHANGE TEMP. ONLY
PREVENT ALL CHANGES

USER MENU SELECT

SECURITY SETTINGS

In order to prevent tampering with the program and your desired settings, two levels of security are available. The first will allow only temporary changes to the temperature. It protects all other programmed setpoints. The second will restrict changes to EVERYTHING, including temporary changes to the temperature.

ENTER SECURITY CODE

FOR TEMPERATURE

0 0 0 0

USER MENU SELECT

SECURITY CODE

In this screen you enter a four-digit code. Use the UP or DOWN button to change the first value, press SELECT. The second digit will be highlighted. Repeat for all four values. And don't forget your code. If you do, you will have to reset the entire thermostat and that will erase all the schedules you've programmed into the unit.

When would I need to change the USER settings?

About the only features you may need to change are the FILTER INTERVAL (in case you get a new type of high efficiency filter), the temperature differentials (if you desire additional comfort), and the security settings. All the other settings probably will not need to be changed.

What are the **INSTALLER** settings?

The **INSTALLER SETTINGS** are setup during the initial installation. They tell the thermostat how to function with your heating or cooling equipment. The following is a brief overview and discussion of these settings.

INSTALLER SETTINGS		SELECT ▼
SYSTEM SETUP	GAS	
RESIDUAL COOL	60	
LOW BALANCE	45°F	
HIGH BALANCE	95°F	
HOME		

INSTALLER SETTINGS		SELECT ▼
AUTOCHANGEOVER	OFF	
EER	ON	
DEADBAND	3°F	
SECURITY	OFF	
HOME		

INSTALLER SETTINGS		SELECT ▼
SECURITY	OFF	
CONTACT INFO		
SERVICE INT		
REMINDER	RUN	
MAIN MENU		

SYSTEM SETUP		SELECT
FURNACE		
HEAT PUMP		
INSTALL MENU		

SYSTEM SETUP

Choose the system component which the thermostat will control.

1ST STAGE HEATING		SELECT
GAS/OIL		
ELECTRIC		
INSTALL MENU		

1st STAGE HEATING

The 9701i and the 9715i can have a gas/oil or electric first stage heating. Choose the energy source for 1st stage heating.

INSTALLER settings (continued)

AUXILIARY HEAT	
STANDARD - COMP. =ON	
ADD ON - COMP. =OFF	
INSTALL MENU	SELECT

AUXILIARY HEAT

The 9720i can be set to use your 2H/2C heat pump internal auxiliary heating or to use an external add-on source. The add-on feature will be used most often when a single stage heat pump uses a gas or electric furnace as its second stage of heating.

RESIDUAL COOL	
SECONDS DELAY	60
INSTALL MENU	SELECT

RESIDUAL COOL

In order to get greater efficiency from the cooling system, the fan can be programmed to run for 0 (OFF), 30, 60, 90, or 120 seconds after the air conditioner has shut off.

BALANCE POINTS	
LOW BALANCE	45°F
HIGH BALANCE	95°F
INSTALL MENU	SELECT

BALANCE POINTS

This screen will appear only when the optional outdoor sensor (9025i) is connected to the thermostat. When this sensor is used with the 9720i, you can set the lower and upper temperatures to disable or enable 2nd stage heat.

AUTO CHANGEOVER	
DISABLE	
ENABLE	
INSTALL MENU	SELECT

AUTO CHANGEOVER

When turned on, the thermostat will switch automatically between heating and cooling to maintain the optimal temperature in your home.

INSTALLER settings (continued)

ENERGY EFFICIENT RECOVERY		SELECT
DISABLE		
ENABLE		
USER MENU		

ENERGY EFFICIENT RECOVERY

When turned on, the thermostat will look up to two hours before the next event and anticipate when to turn on to reach the desired temperature.

DEADBAND SETPOINT		SELECT
3°F		
USER MENU		

DEADBAND SETPOINT

Deadband is used with the AUTO CHANGEOVER feature. The deadband is the temperature difference from the setpoint temperature during which the heating or cooling will not be turned on. This is adjustable from 2-8°F (1.0-4°C).

ENTER SECURITY CODE		
FOR INSTALLER		
SETTINGS		
0 0 0		
USER MENU		SELECT

SECURITY CODE

Enter a code to prevent changes to the INSTALLER settings.

CONTACT INFORMATION

CONTACT INFORMATION
AIR EXPERTS
1-555-555-1212

BACK EDIT

This allows the servicing HVAC contractor to put their name and phone number into the thermostat to remind you when service may be required.

SERVICE MONITOR MENU

SERVICE MONITOR MENU
SERVICE MONITOR 980
FILTER MONITOR 980

INSTALL MENU SELECT

Two menus are available, the Service Monitor and the Filter Monitor. Both can be set based on the HVAC system run time or calendar based. See Reminder Interval.

The Service Monitor can be set from OFF to 360 Days in 30 day increments or OFF to 980 in 20 hour increments.

The Filter Monitor can be set from OFF to 360 Days in 30 day increments or OFF to 980 in 20 hour increments.

REMINDER INTERVAL

The Reminder Interval can be set for either HVAC System run time or based on the calendar.

If Run Time is chosen, the service reminder will be set in hours. After the HVAC System has been operating for the selected number of hours, a Service Reminder will be displayed informing you that service is suggested for your system.

If Calendar Time is chosen, the service reminders will be set in days. After the selected number of days has passed, a Service Reminder will be displayed informing you that service is suggested for your system.

REMINDER PERIOD

RUN TIME
CALENDAR TIME


INSTALL MENU SELECT

When would I need to change the INSTALLER settings?


NEVER! The INSTALLER SETTINGS are selected based on the type of equipment you have in your home. This feature should be set only by a certified HVAC technician. Changing these settings could result in higher energy costs and may even damage your equipment. There is a security lock on this feature to prevent tampering. USE IT!

When should I change the batteries?

Only the model 9700i operates with batteries. The 9701i, 9715i and 9720i operate from power provided by your heating/cooling system.

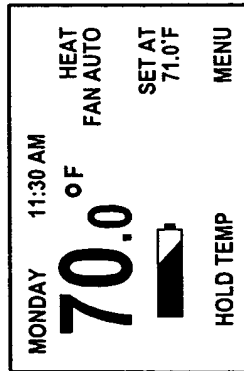


Generally the batteries will last 18-24 months. The thermostat will tell you when to change the batteries. A battery symbol will appear just below the temperature display. The thermostat will continue to operate for a short period of time with this notification on the display. The low battery warning supercedes all other notifications including outdoor temperature and the filter monitor.

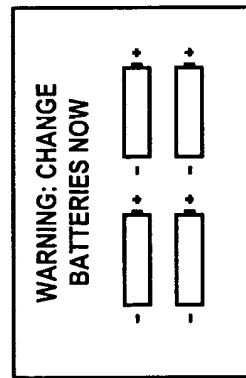

If the WARNING screen is displayed, the thermostat will shut down all operations, including heating and cooling. It's important to change the batteries promptly if this screen appears.

How do I change the batteries?

Simply slide the battery door to the right. Remove the two right most batteries first. Then remove the two left batteries. The screen to the left will appear. This screen will help you orient the new batteries. Replace with four fresh AA alkaline batteries. **REPLACEMENT TIP:** It's easier to replace the two left most batteries first, then the right ones.

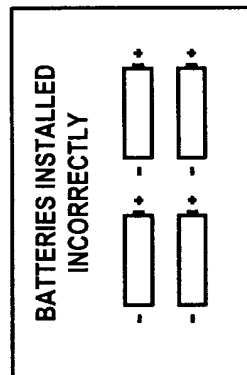



515 South Promenade Avenue
Corona, CA 92879-1736
United States of America
Made in Mexico
Patents Pending
www.about-i-series.com

110-1023C

THIS PAGE BLANK (USPTO)